


Geyser

Panels

**Geyser isolator
in roof**

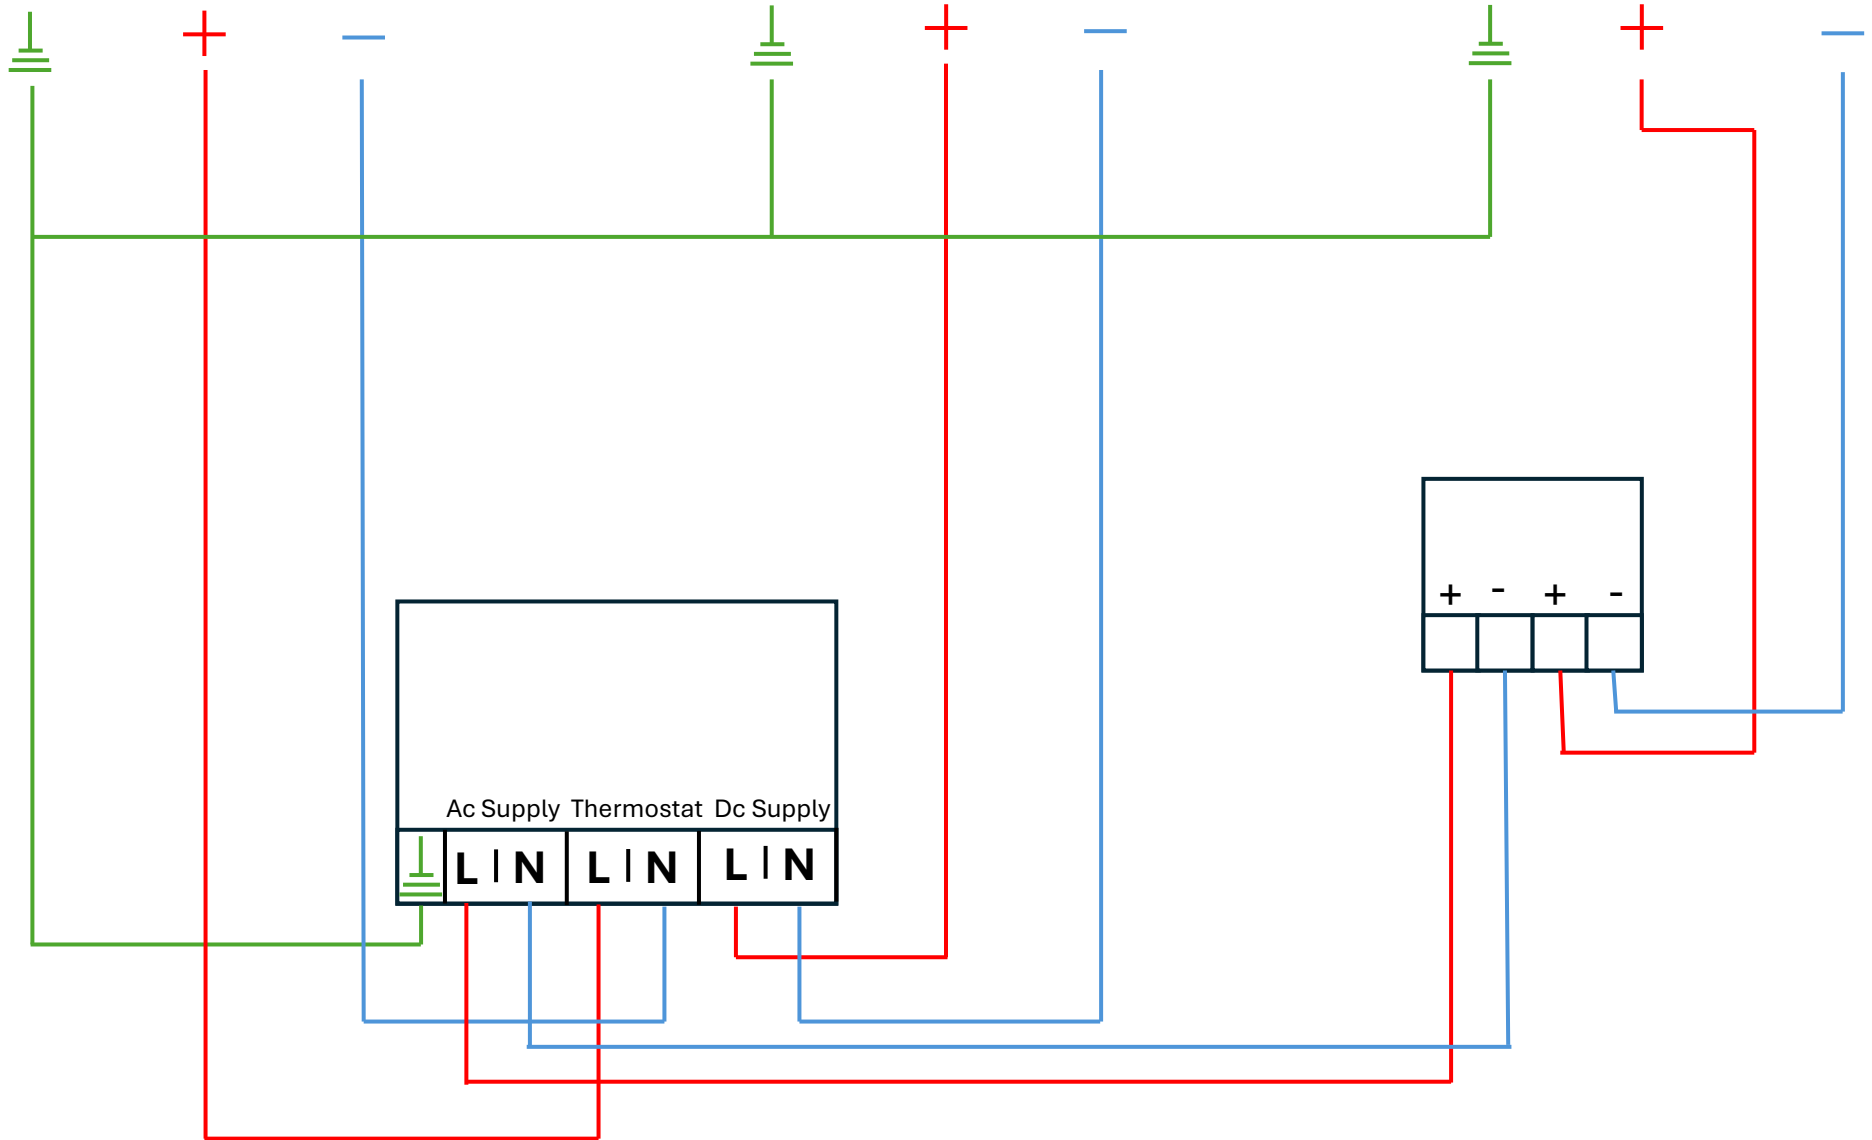

Installation Instructions


- See diagram for wiring – Diagram 1
- Install the DIY kit on wood beam with wood screws not more than 1.80m from the geyser (the temperature sensor is only 2.2m long)
- Connect AC supply from geyser isolator to timer
- Connect DC supply to fuses
- Connect output of the controller to geyser thermostat
- Secure the temperature sensor to the flange of geyser or hot water pipe (for connection on the geyser, flange use foil & fireclay as per diagram 2)

DIAGRAM 2:





- Download EweLink on your phone (support only 2.4G)
- Put timer in pairing mode by pressing the ON button for 7 seconds
- Follow instructions below.

DIAGRAM 3

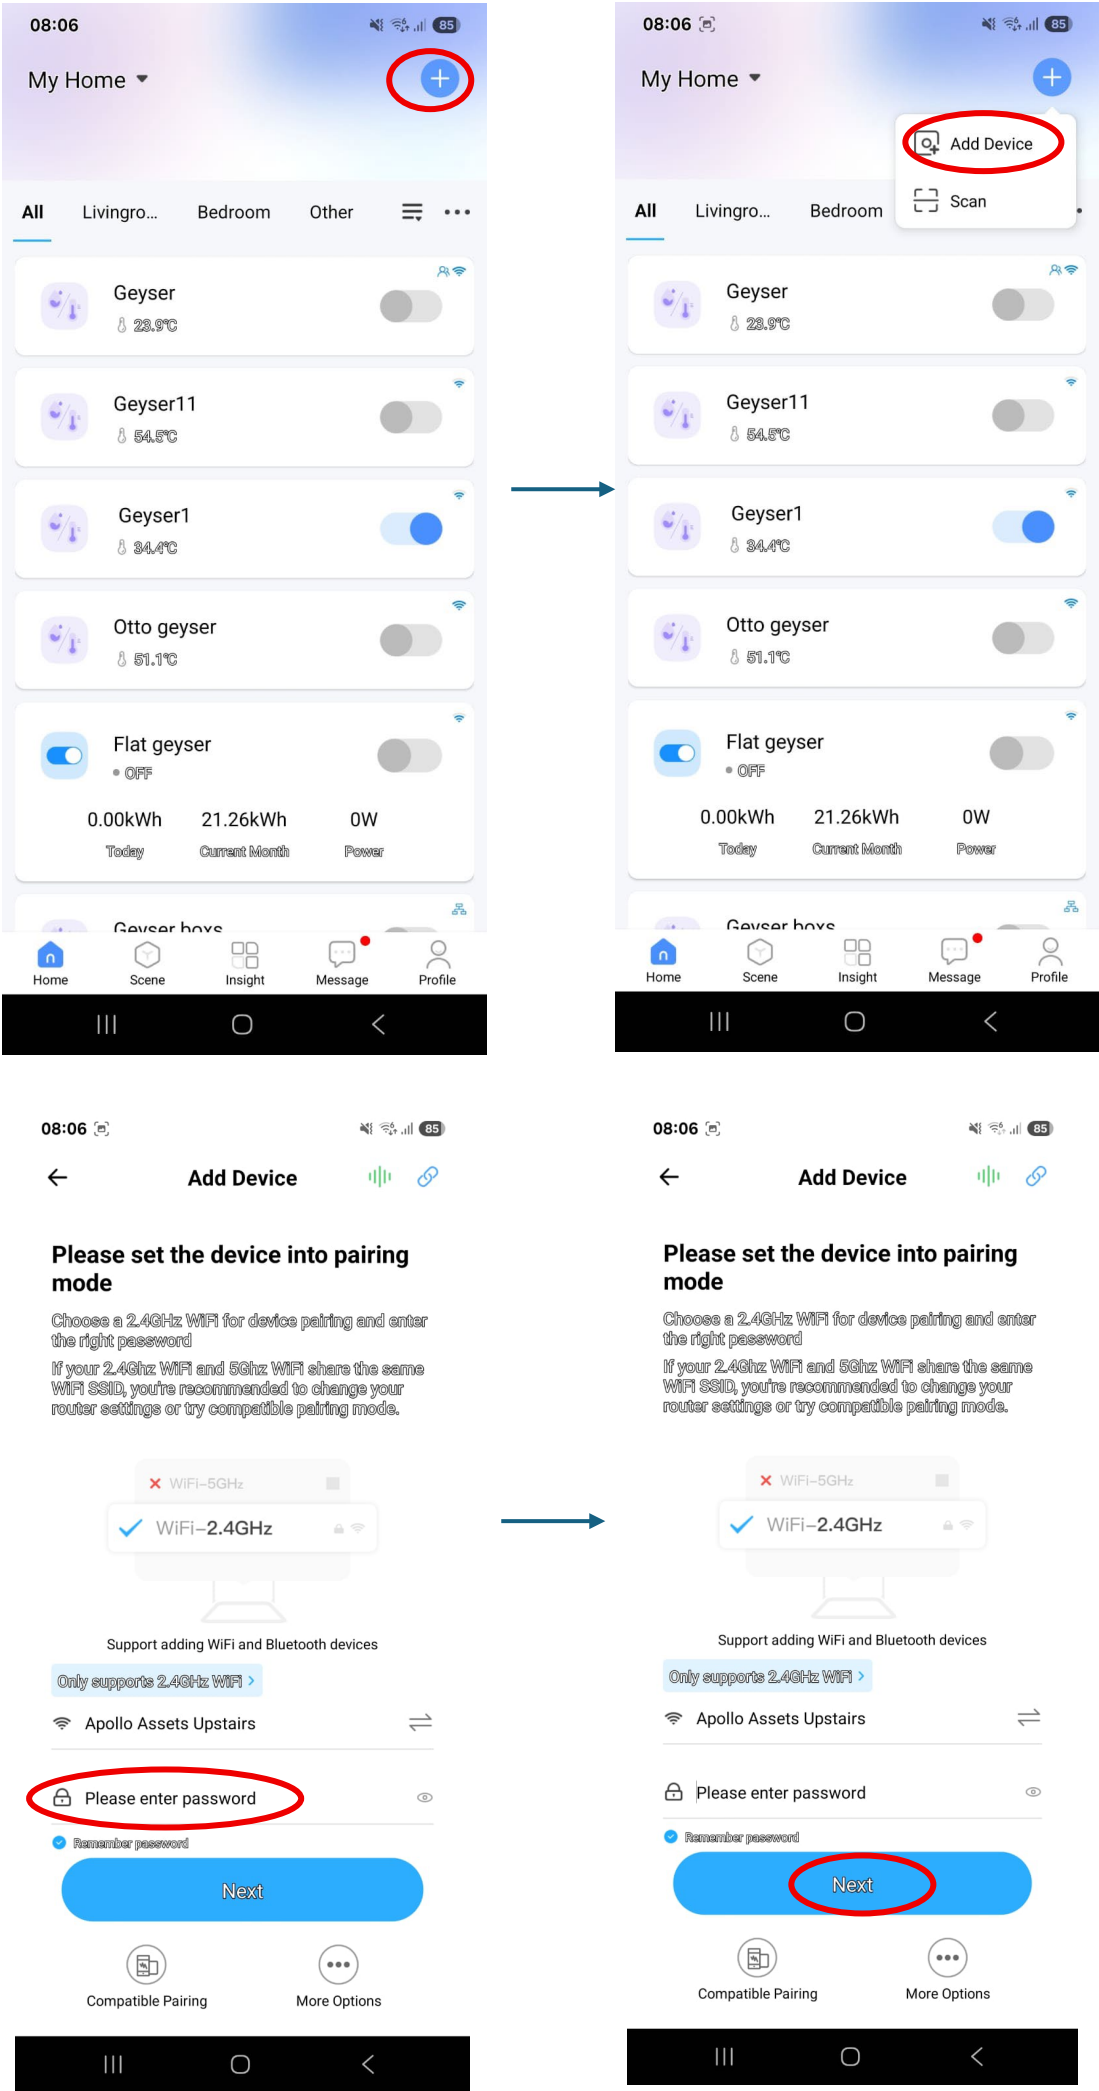

- Please note that there is approximately 7 degrees difference between the temperature on the geyser flange of the actual temperature.
- Calibration on the app have to be done by increasing the temperature by 7 degrees (see diagram)

DIAGRAM 4

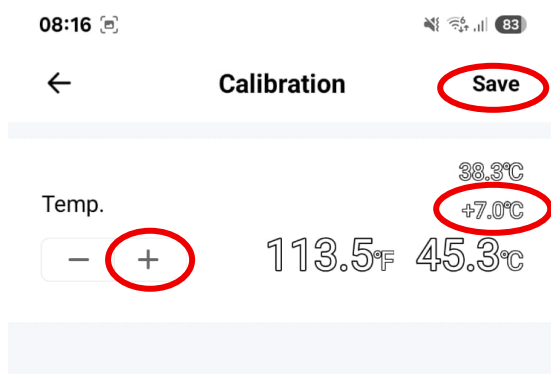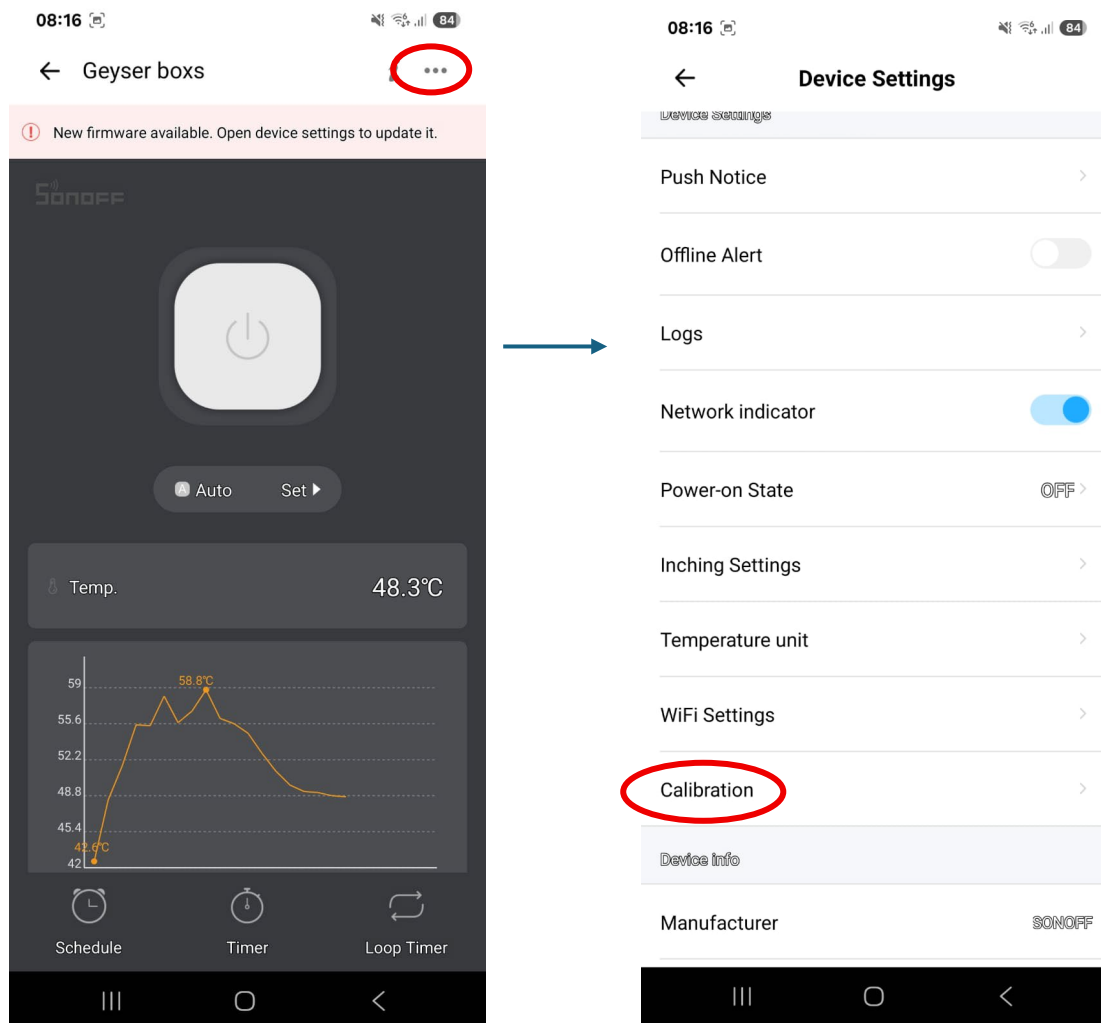

WARNING:

Installation to be done by a qualified electrician only.

24 Month warranty is applicable on the controller of the Sonoff timer only.

Apollo Energy do not take responsibility for any injury caused by the installer.